

UART Installation Instruction for Nexys-4 DDR

Insatall the UART Driver

Download and install the UART driver using the setup program provided with the link in this item. Nexys-4 DDR uses a FTDI FT2232HQ USB-UART bridge chip and it requires installation of its driver on the PC connected.

CDM21228_Setup.exe